


# PROSAN+ DETERGENT CHLORINE TABLETS

## BLOOD SPILLS



**1** Wear appropriate PPE: Gloves & Apron. When using solution, wear safety glasses with side shields in case of splashing.

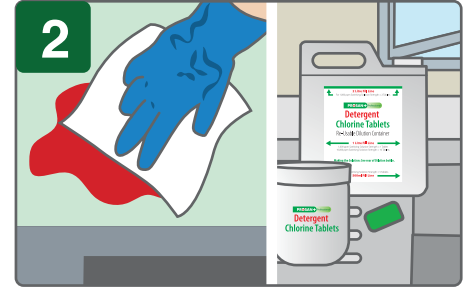

**2** To contain Blood Spill, cover with paper towels. Prepare the Prosan Plus solution as per the chart below using cold potable (tap) water. Carefully pour over towels. Leave for 3 minutes. Dispose of all the Spill material as Clinical Waste.



**3** Clean the spill area with Neutral Detergent (Detergent Wipes).



**4** Keep prepared solution for no longer than 24 hours. Dispose of residual solution into an appropriate drain, sluice or sink with running water.



**5** Remove gloves and apron and dispose of as Clinical Waste then wash hands thoroughly.

### DILUTION INSTRUCTIONS

FOR DISINFECTION OF (DRY/WET) BLOOD SPILLAGES – 10,000 PPM AVAILABLE CHLORINE			CONTACT TIME
Disinfection of Dry and Wet Blood Spillages	Prosan Plus Tablets	Mix 1 tablet per 100ml water Or 5 tablets per 500ml water Or 10 tablets per 1 Litre water	3 Minutes

### HEALTH & SAFETY

**DO NOT** use directly on Vomit or Urine Spills

**DO NOT** breathe in fumes, gas, vapours, powder or mist

**AVOID** contact with Eyes and Skin

**AVOID** prolonged contact with metals.  
**TAKE CARE:** Solution will bleach fabrics

**ALWAYS** dispose of used materials as Clinical Waste

**ALWAYS** make a fresh solution every 24 hours

**ALWAYS** work in a well-ventilated area

**ALWAYS** replace tablet pot lid and store in a secure, dry place

USE THIS BIOCIDES SAFELY: REFER TO LOCAL HOSPITAL POLICY. REFER TO THE PRODUCT SAFETY DATA SHEET. READ THE PRODUCT LABEL.